


MEET YOUR KINDLE SCRIBE

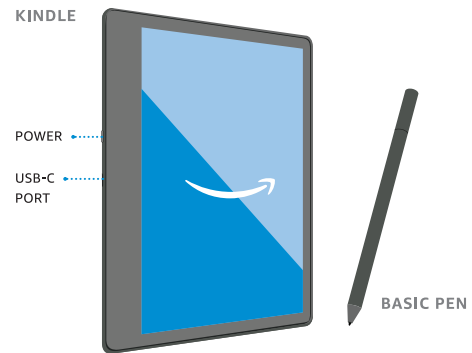


Also included: Basic Pen, USB-C cable, and replacement tips.


ACTIVATE YOUR KINDLE SCRIBE

- 1 POWER**
Long press the power button to power on your Kindle Scribe.
- 2 SETUP**
Follow the on-screen instructions to get started.


For more information, visit the Kindle User Guide located in your device settings.

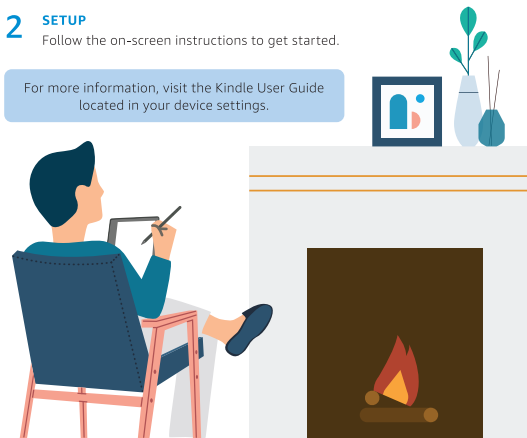

HOW TO REPLACE THE TIPS

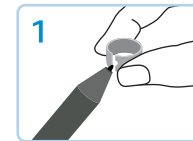

Remove the old tip using the included replacement tool.

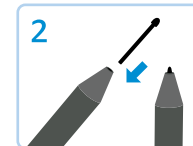

Insert the replacement tip into the opening until it's seated.

