


## MEET YOUR KINDLE SCRIBE

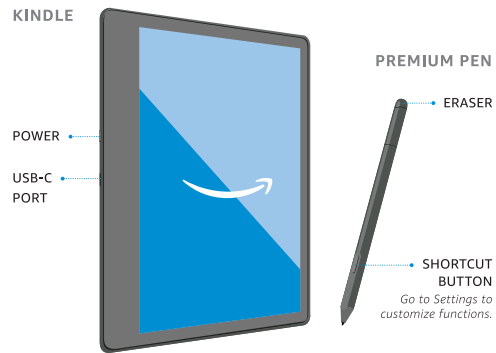


Also included: Premium Pen, USB-C cable, and replacement tips.


## ACTIVATE YOUR KINDLE SCRIBE

- 1 POWER**  
Long press the power button to power on your Kindle Scribe.
- 2 SETUP**  
Follow the on-screen instructions to get started.


For more information, visit the Kindle User Guide located in your device settings.

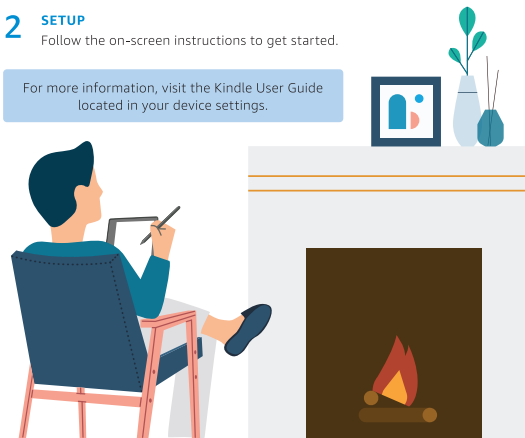

## HOW TO REPLACE THE TIPS

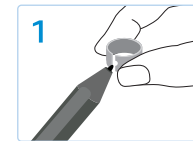

Remove the old tip using the included replacement tool.

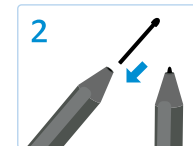

Insert the replacement tip into the opening until it's seated.

